





by Schneider Electric

Installation and Operation Back-UPS[®] BR1000GUXI/BR1500GUXI

Inventory

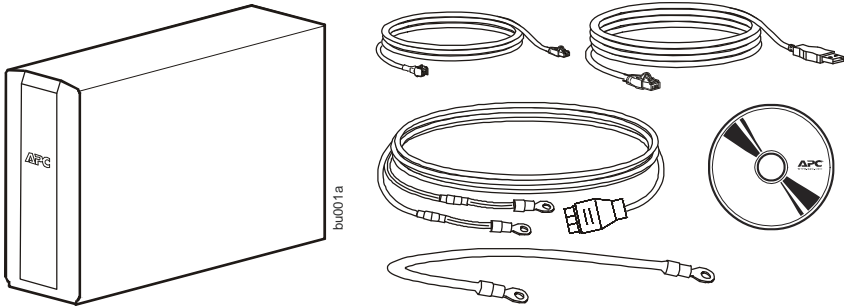

Safety and General Information

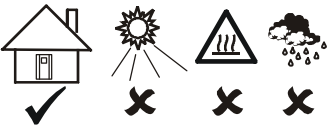

This UPS is intended for indoor use only.

Do not operate this UPS in direct sunlight, in contact with fluids, or where there is excessive dust or humidity.

Be sure the air vents on the UPS are not blocked.

Allow adequate space for proper ventilation.

The battery typically lasts for two to three years. Environmental factors impact battery life. Elevated ambient temperatures, poor quality AC power, and frequent short duration discharges will shorten battery life.

Connect the Back-UPS power cable directly to a wall outlet. Do not use surge protectors or extension cords.

APC Customer Support India

Internet	http://www.apc.com/support
Toll Free BSNL network	1 800 425 4272
All other networks	city code + 39022272
E-mail	indiainfo@apc.com

Specifications

Model	BR1000GUXI	BR1500GUXI
VA	1000 VA	1500 VA
Maximum Load	600 W	865 W
Nominal Input Voltage	220 Vac-240 Vac	
Online Input Voltage Range	170 Vac to 294 Vac	
Automatic Voltage Regulation	182 Vac-216 Vac +17% 252 Vac-282 Vac -17%	
Frequency Range	50/60 Hz \pm 1 Hz	
On-battery wave shape	Step-approximated sine-wave	
Typical Recharge Time	Up to 8 hours	
Transfer Time	10 ms, maximum	
Operating Temperature	0° to 40° C (32° to 104°F)	
Storage Temperature	-5° to 45° C (23° to 113° F)	
Unit Dimensions	30.1 \times 11.2 \times 38.2 cm (11.9 \times 4.4 \times 15 in)	
Unit Weight	6.6 kg (14.5 lbs)	
Interface	Serial*, USB	
Charging Current	3 A \pm 10%	
Battery Type	Sealed Maintenance Free (SMF) batteries	
<p>Recommended Batteries: APCBAT12AHSMF, APCBAT18AHSMF and APCBAT26AHSMF.</p> <p>Do not exceed the maximum or minimum recommended battery charging current rate when configuring the Ah capacity of the external battery system.</p> <p>Always recycle used batteries.</p>		

*A standard serial cable is incompatible with the Back-UPS. Use only an APC serial cable. To order an APC serial cable go to the APC Web site or call customer service.
Refer to APC Customer Support for contact information.



Caution: Do not use batteries with capacity greater than 26 Ah.

Installation


Connect 12 V external batteries

Adhere to all national and local electrical codes.

Do not connect the positive and negative terminals on a single battery. Doing so can cause the terminals to short and may cause a fire hazard.

Connect no more than two external 12 V batteries in series. The batteries must be of the same Ah capacity.


Connect the external batteries using the cables supplied with the UPS. Refer to the diagram below.

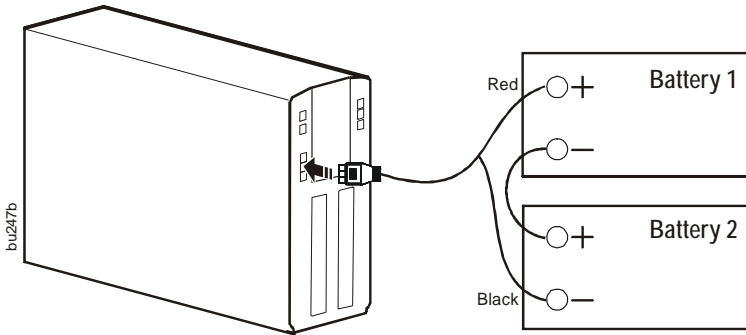

1. Remove the safety covers on the battery terminals.
2. Use the short jumper cable to connect the negative terminal on battery 1 to the positive terminal on battery 2.
3. Locate the color coded cable with the 3 pin cable assembly. Connect the red cable to the positive terminal on battery 1. Connect the black cable to the negative terminal on battery 2. Connect the 3 pin connector to the external battery receptacle on the rear panel of the UPS.
4. Replace the safety covers on the battery terminals.

To Connect 12 Ah batteries

Before connecting 12 Ah batteries, pull the two adaptor cables off the 3 pin cable assembly.

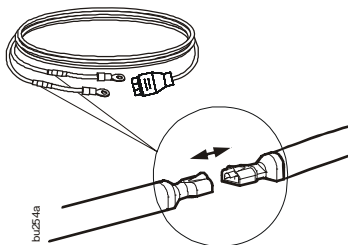


Connect the Equipment

Battery backup and surge protected outlets

When the Back-UPS is receiving input power, the Surge Protection only outlets and the Battery Backup with Surge Protection outlets will supply power to connected equipment. During a power outage or other utility problems, only the Battery Backup outlets receive power for a limited time from the Back-UPS.

Connect equipment such as printers, FAX machines, scanners, or other peripherals that do not need battery backup power to the Surge Protection Only outlets. These outlets provide full time protection from surges even if the Back-UPS is switched OFF.

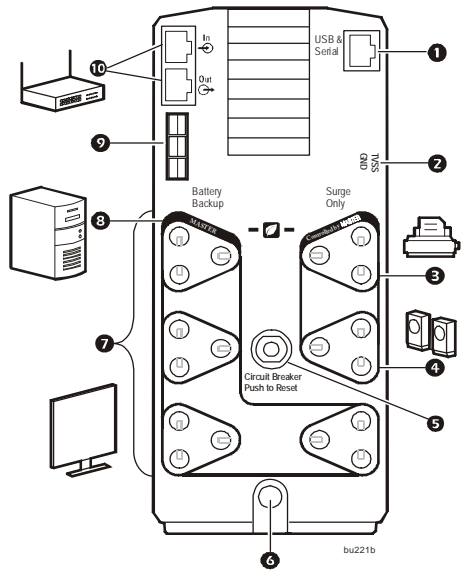

Master and controlled outlets

To conserve electricity, when the device connected to Master Outlet goes into Sleep or Standby mode, or turns Off, the Controlled by Master device(s) will shut down as well, saving electricity.

Connect a master device, such as a desktop computer or audio/visual receiver to the Master outlet. Connect peripheral devices such as a printer, speakers, or a scanner to the Controlled by Master outlets.

1	USB and Serial Data port	To use PowerChute Personal Edition, connect the supplied USB software cable or serial cable.
2	Ground screw	Connect the ground wire from another surge suppression device such as a network or data line surge protector to the ground screw on the Back-UPS.
3	Surge Protection outlet, Controlled by Master outlet	This outlet provides surge protection during a power outage. This outlet will disconnect from utility power during a power outage, or in the event that the Master outlet goes into Sleep mode.

④	Surge Protection outlet	This outlet provides full-time protection for connected equipment from power surges when the Back-UPS is turned on or off. The Surge Protection outlet does not provide battery backup to connected equipment. Connect a printer, scanner or other noncritical devices that do not require battery backup protection.
⑤	Circuit breaker	Use to reset the system after an overload or short circuit.
⑥	AC Power Cable	Connect the Back-UPS to utility power.
⑦	Battery Backup outlets with Surge Protection	During a power outage or other utility problems, these outlets provide power from the Back-UPS battery. Connect critical equipment such as desktop computer, computer monitor, modem or other data sensitive devices to these outlets.
⑧	Master outlet	Connect the master device to this outlet, in most scenarios, this will be the main computer.
⑨	External battery connector	Connect external batteries using connector supplied with the unit. Note: Always connect only two 12 V batteries of same capacity in series.
⑩	Telephone/Network Ports	Connect a telephone, FAX, router or modem to the appropriate In or Out port.

Operation

Power-Saving function



To conserve electricity, configure the Back-UPS to recognize a Master device, such as a desktop computer or an A/V receiver, and Controlled peripheral devices, such as a printer, speakers, or a scanner. When the Master device goes into Sleep or Standby mode, or is switched OFF, the Controlled device(s) will be switched off as well, saving electricity.

Notes: Devices that provide network services (such as routers, modems, or wireless printers) should not be plugged into the Controlled outlets. The Back-UPS Pro ships with this Power-Saving feature **DISABLED**. If you wish to use this feature, follow the instructions below:

Enable the power-saving function. Press and hold MUTE and DISPLAY simultaneously for two seconds. The Back-UPS will beep to indicate that the feature is enabled. The leaf icon on the display will illuminate.

Disable the power-saving function. Press and hold MUTE and DISPLAY simultaneously for two seconds. The Back-UPS will beep to indicate that the feature is disabled. The leaf icon on the display will clear out.

Setting the threshold. The amount of power used by a device in Sleep or Standby mode varies between devices. It may be necessary to adjust the threshold at which the Master outlet signals the Controlled outlets to shut down.

1. Ensure a master device is connected to the Master outlet. Put that device into Sleep or Standby mode, or turn it OFF.
2. Press DISPLAY and MUTE simultaneously and hold for six seconds, until the leaf icon flashes three times and the Back-UPS beeps three times.
3. The Back-UPS will now recognize the threshold level of the Master device and save it as the new threshold setting.

Power-Saving display

The display interface can be configured to be continuously illuminated, or to save energy, it can be configured to clear out after a period of inactivity.

1. Full Time Mode: Press and hold DISPLAY for two seconds. The display will illuminate and the Back-UPS will beep to confirm the Full-Time mode.
2. Power-Saving Mode: Press and hold DISPLAY for two seconds. The display will go dark and the Back-UPS will beep to confirm the Power-Saving mode. While in Power-Saving Mode, the display will illuminate if a button is pressed, it then goes dark after 60 seconds of no activity.

Unit sensitivity


In situations where the Back-UPS or connected equipment appears too sensitive to input voltage, it may be necessary to adjust the transfer voltage. Adjust the sensitivity of the Back-UPS to control when it will switch to battery power; the higher the sensitivity, the more often the Back-UPS will switch to battery power.

1. Ensure that the Back-UPS is Off but connected to utility power.
2. Press and hold the POWER button for six seconds. The LOAD CAPACITY bar will flash on and off, indicating that the Back-UPS is in programming mode.
3. Press POWER again to rotate through the menu options. Stop at selected sensitivity. The Back-UPS will beep to confirm the selection.

Generator Sensitivity

Default

Sensitive Loads

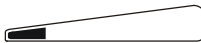

Low sensitivity
150-300 Vac

Medium sensitivity (Default)
170-294 Vac

High sensitivity
170-288 Vac

Input voltage is extremely low or high. Not recommended for computers.

The Back-UPS frequently switches to battery power.



The connected equipment is sensitive to voltage fluctuations.

Front panel buttons and display interface





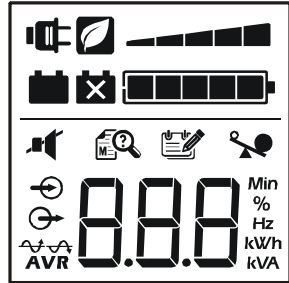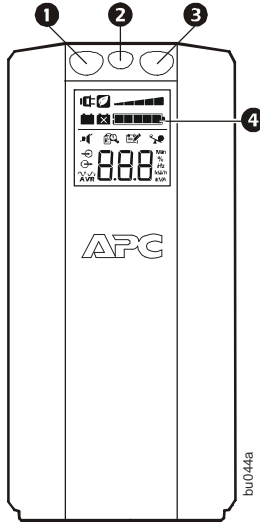

Use the three buttons on the front panel of the Back-UPS and the display interface to configure the Back-UPS.










Front panel

- ① MUTE button
- ② POWER ON/OFF button
- ③ DISPLAY button
- ④ Display interface



bu0002a

	On Line —The Back-UPS is supplying conditioned utility power to connected equipment
	Power-Saving —Master and Controlled outlets are enabled, saving power when the master device goes into sleep or standby mode
	Load Capacity —The load is indicated by the number of sections illuminated, one to five. Each bar represents 20% of the load.
	Battery Charge —The battery charge level is indicated by the number of sections illuminated. When all five blocks are illuminated, the Back-UPS is at full charge. When one block is filled, the Back-UPS is near the end of its battery capacity, the indicator will flash and the Back-UPS will beep continuously.
	Overload —The power demand from the load has exceeded the capacity of the Back-UPS.
	Event —The event counter shows the number of events that occurred that caused the Back-UPS to switch to on-battery operation.




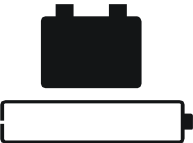
	<p>Automatic Voltage Regulation—The Back-UPS can compensate for high or low input voltage.</p> <p> When illuminated, the Back-UPS is compensating for low input voltage.</p> <p> When illuminated, the Back-UPS is compensating for high input voltage.</p>
 	<p>Input voltage.</p> <p>Output voltage.</p>
	<p>System Faults—The system has a fault. The fault number will illuminate on the display interface. See “System faults” on page 9.</p>
	<p>Mute—If the line through the speaker icon is illuminated, the audible alarm has been turned off.</p>
	<p>Replace Battery—The battery is not connected or is nearing the end of its useful life. Replace the battery.</p>
	<p>On Battery—The Back-UPS is supplying battery backup power to the connected equipment, it will beep four times every 30 seconds.</p>

Warnings and System Faults

Audible warnings


<p>Four Beeps Every 30 Seconds</p>	<p>Back-UPS is running on battery. You should consider saving any work in progress.</p>
<p>Continuous Beeping</p>	<p>Low battery condition and battery run-time is very low. Promptly save any work in progress, exit all open applications, and shut down the operating system.</p>
<p>Continuous tone</p>	<p>Battery Backup outputs are overloaded.</p>
<p>Chirps for 1 Minute every 5 hours</p>	<p>Battery fails the automatic diagnostic test and should be replaced.</p>

Warning icons










If these icons are illuminated...	This may be the problem.
	<p>The Back-UPS is operating on utility power, but is overloaded. Disconnect one of the devices connected to the Back-UPS. If the Overload icon stops flashing, the Back-UPS is no longer overloaded and will continue to operate normally.</p>
	<p>The Back-UPS is operating on battery power, but is overloaded. Disconnect one of the devices connected to the Back-UPS. If the Overload icon stops flashing, the Back-UPS is no longer overloaded and will continue to operate normally.</p>
	<p>The Back-UPS is operating on utility power, but the battery is not functioning properly. Contact APC Customer Support to order a replacement battery.</p>
	<p>The Back-UPS is operating on battery power and the battery power is getting low. Shut down all connected equipment to avoid losing any unsaved data. When possible, connect the Back-UPS to utility power to recharge the battery.</p>




System faults

The Back-UPS will display these fault messages.

	F01	On-Battery Overload	Turn the Back-UPS off. Disconnect non-essential equipment from the Battery Backup outlets and then turn Back-UPS on.
	F02	On-Battery Output Short	Turn the Back-UPS off. Disconnect non-essential equipment from the Battery Backup outlets and then turn Back-UPS on.
	F03	On-Battery Xcap Overload	Faults F03-F09 cannot be corrected by the user, contact APC Customer Support for assistance.
	F04	Clamp Short	
	F05	Charge Fault	
	F06	Relay Welding	
	F07	Temperature	
	F08	Fan Fault	
	F09	Internal Fault	

Function Button Quick-Reference

Function	Button	Timing (seconds)	UPS Status	Description
Power				
Power On		0.2	Off	Press POWER to start receiving input utility power. If input utility power is not available, the Back-UPS will run on battery power.
Power Off		2	On	The Back-UPS is not receiving input utility power, but is providing surge protection.
Display				
Status Inquiry		0.2	On	Verify the status or condition of the Back-UPS. The LCD will illuminate for 60 seconds.
Full-Time/ Power-Saving modes		2	On	The LCD will illuminate and the Back-UPS will beep to confirm the Full-Time mode. The LCD will not illuminate and the Back-UPS will beep to confirm the Power-Saving mode. While in Power-Saving Mode, the LCD will illuminate if a button is pressed. It turns off after 60 seconds of inactivity.
Mute				
Event Specific		0.2	On	Disable any audible alarms caused by an event.
General Status Enable/Disable		2	On	Enable or disable the audible alarms. The Mute icon will illuminate and the Back-UPS will beep one time. The Mute function will not activate unless the Back-UPS is operating on battery power.
Sensitivity		6	Off	The Load Capacity icon will blink, indicating that the Back-UPS is in program mode. Use the POWER button to scroll through Low, Medium, and High, stop at selected sensitivity. The Back-UPS will beep to confirm selection. See Configuration for details.
Master/ Controlled outlet Enable/ Disable		2	On	The leaf icon will not illuminate indicating that the Master Outlet feature is disabled, or illuminate to indicate the Master Outlet feature is enabled. The Back-UPS will beep once.
Master/Enable Threshold Calibration		6	On	While calibrating the threshold setting, the device connected to the Master Outlet should be turned off or placed in Standby or Sleep mode. Upon completion, Power-Saving icon will flash 3 times and beep 3 times.

Self-Test (manual)		6	On	The Back-UPS will perform a test of the battery. Note: This will happen automatically when the Back-UPS is turned ON.
Event Reset		0.2	On	When the Event screen is visible, press and hold DISPLAY, then press POWER, to clear the utility failure event counter.
Fault Reset		2	Fault	After a fault has been identified, press POWER to remove the visual indication and return to standby status.

Troubleshooting

Problem	Possible Cause	Corrective Action
Back-UPS will not switch on.	The Back-UPS is not connected to utility power.	Ensure that the Back-UPS is securely connected to an utility power outlet.
	The circuit breaker has been tripped.	Disconnect non-essential equipment from the Back-UPS. Reset the circuit breaker. Re-connect equipment one item at a time. If the circuit breaker is tripped again, disconnect the device that caused the trip.
	The battery is not connected.	Connect the battery.
	The utility input voltage is out of range.	Adjust the transfer voltage and sensitivity range.
The Back-UPS does not provide power during a utility power outage.	Ensure that essential equipment is not plugged into a SURGE ONLY outlet.	Disconnect equipment from the SURGE ONLY outlet and re-connect to a Battery Backup outlet.
The Back-UPS is operating on battery power, while connected to utility power.	The plug has partially pulled out of the wall outlet, the wall outlet is no longer receiving utility power, or the circuit breaker has been tripped.	Ensure that the plug is fully inserted into the wall outlet. Ensure that the wall outlet is receiving utility power by checking it with another device.
	The Back-UPS is performing an automatic self test.	No action is necessary.
	The utility input voltage is out of range, the frequency is out of range, or the waveform is distorted.	Adjust the transfer voltage and sensitivity range.
The SYSTEM FAULT indicator is illuminated, all the front panel indicators are flashing.	There is an internal fault.	Determine which internal fault message is displayed by matching the number displayed on the LCD with the corresponding Fault Message (see System Faults) and contact APC Customer Support.

Problem	Possible Cause	Corrective Action
The Back-UPS does not provide the expected amount of backup time.	Battery Backup outlets may be fully or improperly loaded.	Disconnect non-essential equipment from the Battery Backup outlets and connect the equipment to SURGE ONLY outlets.
	The battery was recently discharged due to a power outage and has not fully recharged.	Charge the battery for 16 hours.
	The battery has reached the end of its useful life.	Replace the battery.
The REPLACE BATTERY indicator is illuminated.	The battery has reached the end of its useful life.	Replace the battery.
The OVERLOAD indicator is illuminated.	The equipment connected to the Back-UPS is drawing more power than the Back-UPS can provide.	Disconnect non-essential equipment from the Battery Backup outlets and connect the equipment to SURGE ONLY outlets.
Power is not supplied to some outlets.	Power to the Controlled outlets has intentionally been turned off.	Confirm that the correct peripherals are connected to Controlled outlets. If this feature is not desired, disable the Power-Saving Master and Controlled outlets.
The Controlled outlets are not supplying power, even though the Master device is not in sleep mode.	The Master Outlet threshold may be incorrectly set.	Adjust the threshold when the Master outlet signals the Controlled outlets to shut down.

Service

If the unit requires service, do not return it to the dealer. Follow these steps:

1. Review the *Troubleshooting* section of the manual to eliminate common problems.
2. If the problem persists, contact APC Customer Support.
 - a. Note the model number and serial number and the date of purchase. The model and serial numbers are located on the rear panel of the unit and are available through the LCD display on select models.
 - b. Call APC Customer Support and a technician will attempt to solve the problem over the phone. If this is not possible, the technician will issue a Service Request Number.
 - c. If the unit is under warranty, the repairs are free.
3. An Authorized Service Representative will visit your location and try to resolve the issue.